

# INSTRUCTIONS 4" x 6" MIRROR INSTALLATION

INTRODUCTION: Satellite portable restrooms and accessories must be assembled according to approved assembly procedures. Variations in assembly could adversely affect product life and warranty.



P/N #11027  
RIVET, #66 ALUM

P/N #14474  
MIRROR, 4" X 6" STNLS STEEL

## HARDWARE

### Tools:

- DRILL ELEC/CORDLESS
- #10 (0.194") DRILL BIT
- RIVET GUN

## MAXIM 3000® INSTALLATION

(Install on inside of door frame section of hasp side panel- Location "A")


<p>1. Drill (2) # 10 (.194") or 5 mm holes using dimples for locations being careful to only drill through inside wall of panel.</p>	<p>2. Remove protective plastic film from mirror surface.</p>	<p>3. Rivet mirror to door frame using rivets supplied.</p>

(Install on inside of door- Location "B")

<p>1. Drill (2) # 10 (.194") or 5 mm holes [first hole 7.50" over from door feature as indicated by arrows, 62" from the floor to the top hole] being careful to only drill through inside wall of Door. Rivet mirror thru top hole, transfer drill bottom hole thru mirror and rivet bottom.</p>

## TUFWAY® INSTALLATION

1. Position mirror on inside of door 1" under spring tube and centered on door side to side as shown.

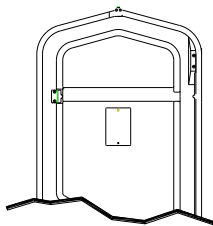

2. Using holes in mirror as a guide, drill (2) #10 (.194) [5mm] holes through inside wall only.  
NOTE: BE CAREFULL NOT TO DRILL THROUGH OUTSIDE WALL OF DOOR.
3. Remove protective plastic film from mirror surface.
4. Rivet mirror to door using rivets supplied.

**MAXIM 2000 INSTALLATION**




- 1) Place mirror in recess on inside of door.
- 2) Using holes in mirror as a guide, drill (2) #10 (.194) [5mm] holes through inside wall only. NOTE: BE CAREFULL NOT TO DRILL THROUGH OUTSIDE WALL OF DOOR.
- 3) Remove protective plastic film from mirror surface.
- 4) Rivet mirror to door using rivets supplied.

**LIBERTY INSTALLATION**

- 1) Place mirror on inside of door upper or lower recess in door (may install 2 mirrors).
- 2) Using holes in mirror as a guide, drill (2) #10 (.194) [5mm] holes through inside wall only. NOTE: BE CAREFULL NOT TO DRILL THROUGH OUTSIDE WALL OF DOOR.
- 3) Remove protective plastic film from mirror surface.
- 4) Rivet mirror to door using rivets supplied.

**FREEDOM 3 INSTALLATION**

- 1) Place mirror on inside of door upper or lower recess in door (may install 2 mirrors).
- 2) Using holes in mirror as a guide, drill (2) #10 (.194) [5mm] holes through inside wall only. NOTE: BE CAREFULL NOT TO DRILL THROUGH OUTSIDE WALL OF DOOR.
- 3) Remove protective plastic film from mirror surface.
- 4) Rivet mirror to door using rivets supplied.

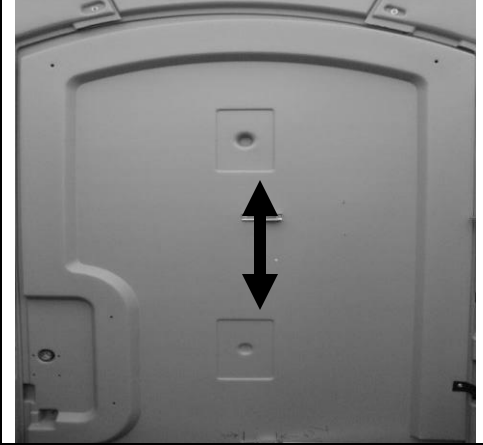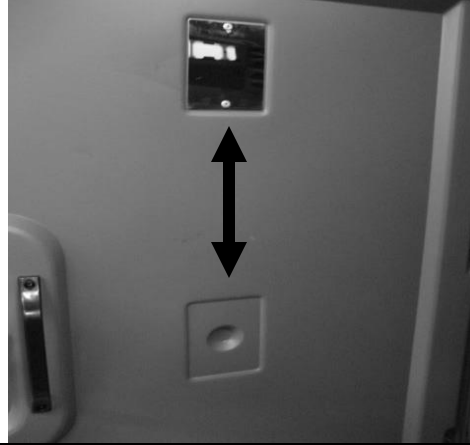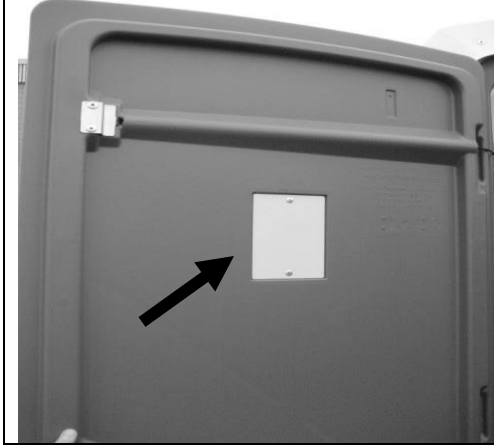


**GLOBALII INSTALLATION**

- 1) Drill at (2) dimples inside of door in recess at top of door using #10 (.194) [5mm] drill bit. NOTE: BE CAREFULL NOT TO DRILL THROUGH OUTSIDE WALL OF DOOR.

**GLOBALII INSTALLATION**

- 1) Remove protective plastic film from mirror surface.
- 2) Place mirror on inside in recess at top of door.
- 3) Rivet mirror to door using rivets supplied.

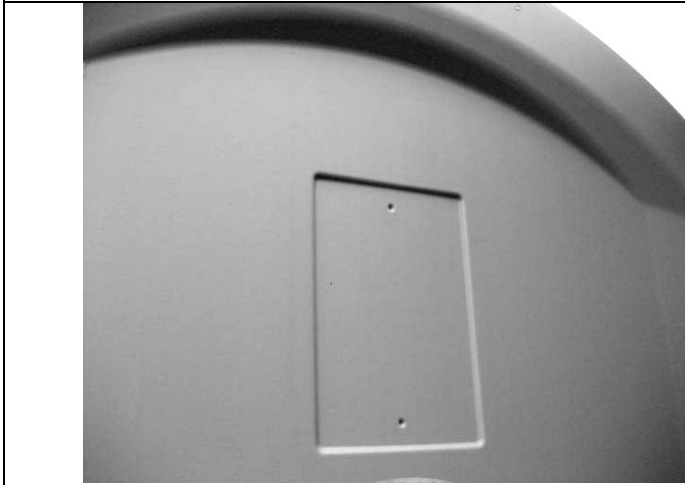

2530 Xenium Lane North, Minneapolis, MN 55441

Telephone: 763-553-1900 Fax: 763-553-1905

800-328-3332 / www.satelliteindustries.com