

Instructions Liberty Accessories

Introduction

Satellite portable restrooms and accessories must be assembled according to approved assembly procedures. Variations in assembly could adversely affect product life and warranty.




Baby change station (PN 22786): See website www.satelliteindustries.com to view instructions **NOTE: THE BABY CHANGE STATION SHOULD BE INSTALLED 1ST BEFORE ANY OTHER ACCESSORIES ARE ADDED TO UNIT.**

Liberty Pro-22 handwash install (PN 23160): See website www.satelliteindustries.com to view instructions

Large mirror kit (PN 23139): Position mirror on inside of door. Centered on door down from spring tube 1.00" Transfer drill in top holes in mirror into door using #10 Drill bit (**through inside wall only on front**). Fasten mirror to door using (2) rivets #17436. Transfer drill in bottom holes in mirror into door using #10 Drill bit. Fasten mirror to door using (2) rivets #17436. **TOOLS:** •Drill •#10 Drill bit •Rivet gun •Tape measure




Small shelf kit (PN 23141): 1) MOUNTING SHELF IN LEFT FRONT CORNER OF UNIT. Add 2 holes in left side of shelf, mark 1-1/4" from 2 existing holes towards end of shelf, centered on vertical wall left side of shelf. Drill at marks in shelf as shown. Position shelf in left front corner of unit (hinge side of door). Holding shelf level, Mark through 4 holes shown on front facing & panel. Drill at 4 marks door using #10 Drill bit (**through inside wall only on front**). Fasten shelf to front facing using (2) rivets #17436. Fasten shelf to panel using (2) rivets #11030 outside on panel & (2) washers 11315 inside unit. TOOLS: •Drill •#10 Drill bit •Rivet gun •Tape measure •Marker

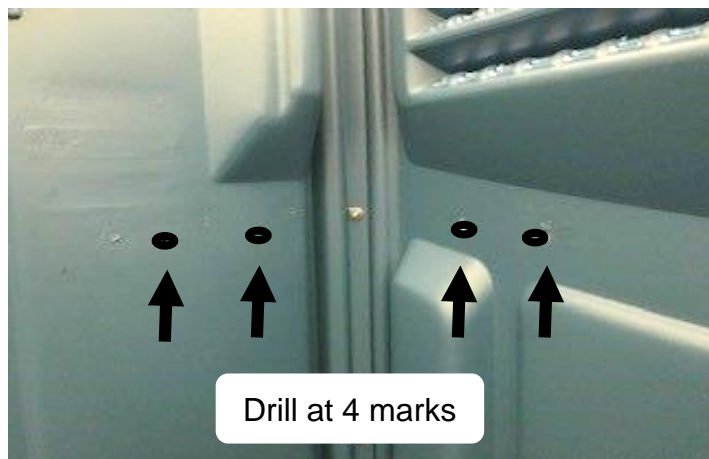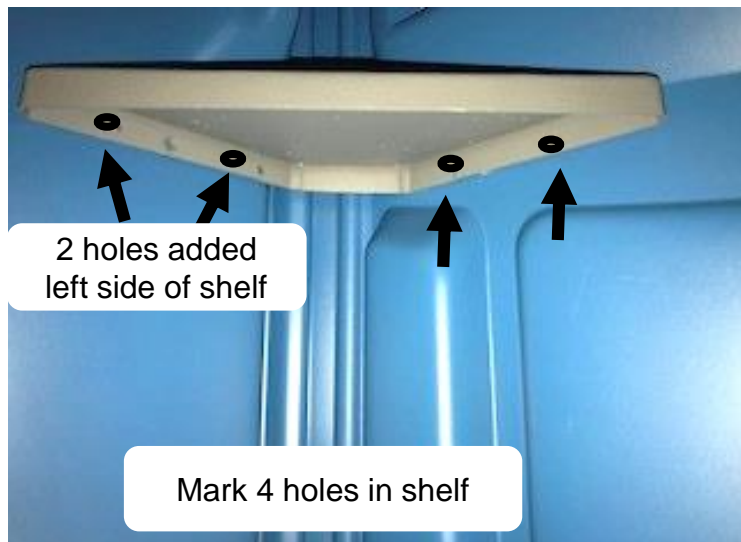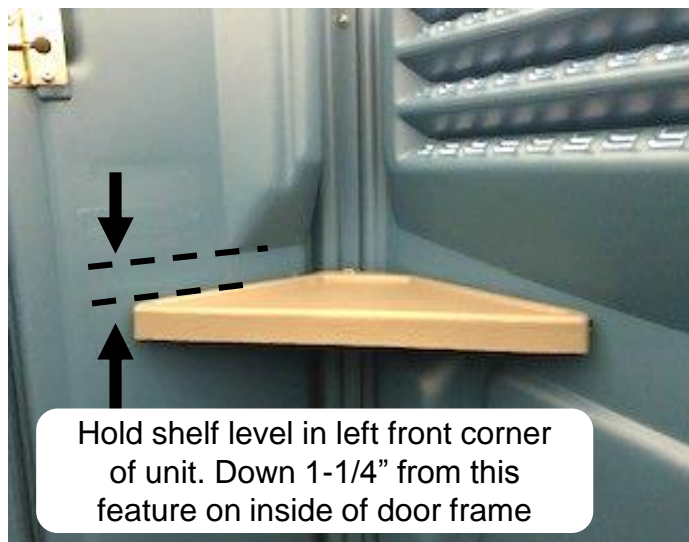


Small shelf kit (PN 23141) (continued): 1) MOUNTING SHELF IN LEFT FRONT CORNER OF UNIT Fasten shelf to panel using (2) rivets #11030 outside on panel & (2) washers 11315 inside unit.






Small shelf kit (PN 23141) (continued): 2) MOUNTING SHELF IN RIGHT FRONT CORNER OF UNIT. Add 2 holes in right side of shelf, mark 1-1/4" from 2 existing holes towards end of shelf, centered on vertical wall right side of shelf. Drill at marks in shelf as shown. Position shelf in right front corner of unit (hasp side of door).

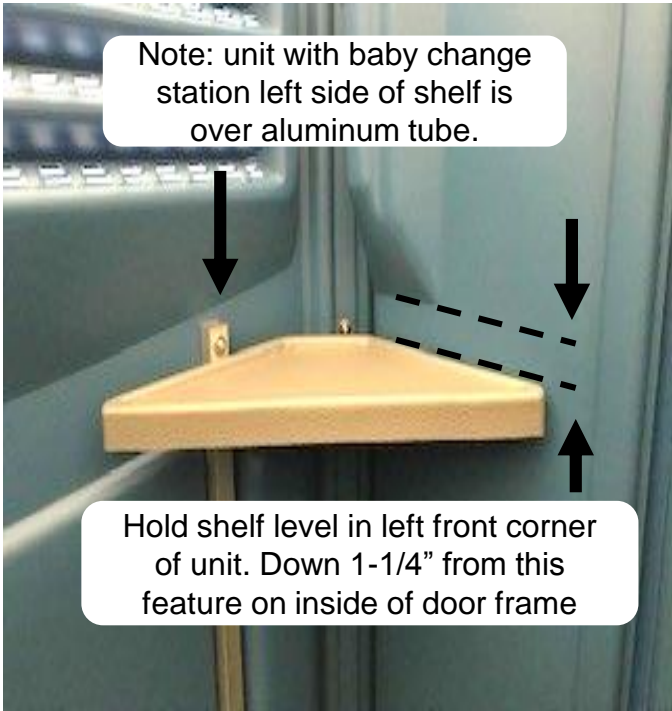


Small shelf kit (PN 23141) (continued): MOUNTING SHELF IN RIGHT FRONT CORNER OF UNIT A) **If unit has baby change station:** Mark through 2 holes shown “on front facing only”. Drill at 2 marks door using #10 Drill bit (**through inside wall only on front**). Fasten shelf to front facing using (2) rivets #17436. Mark shelf at location on vertical aluminum tube (centered on tube) of baby change station. Drill at mark through shelf into tube (1st wall of tube only). Fasten shelf to tube using (1) rivet #11030 in shelf to vertical tube.

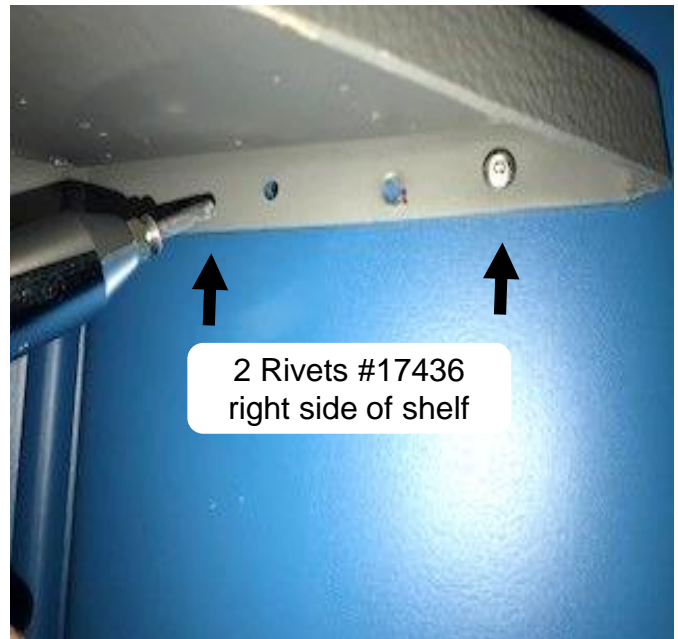


Small shelf kit (PN 23141) (continued): MOUNTING SHELF IN RIGHT FRONT CORNER OF UNIT B) **If unit does not have a baby change station:** Mark through 4 holes on front facing & panel. Drill at 4 marks door using #10 Drill bit (**through inside wall only on front**). Fasten shelf to front facing using (2) rivets #17436. Fasten shelf to panel using (2) rivets #11030 outside on panel & (2) washers 11315 inside unit.

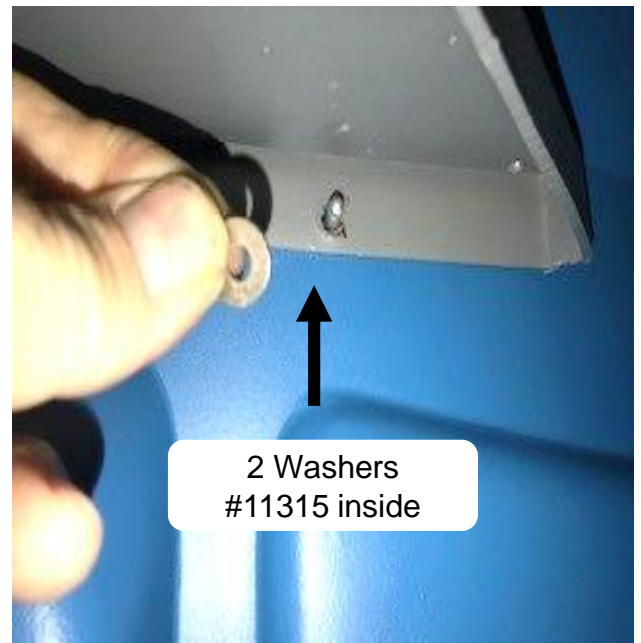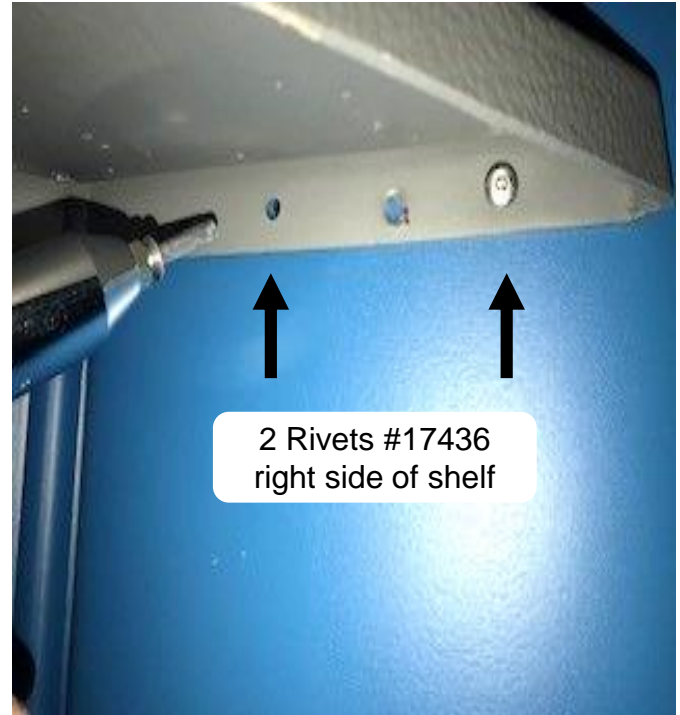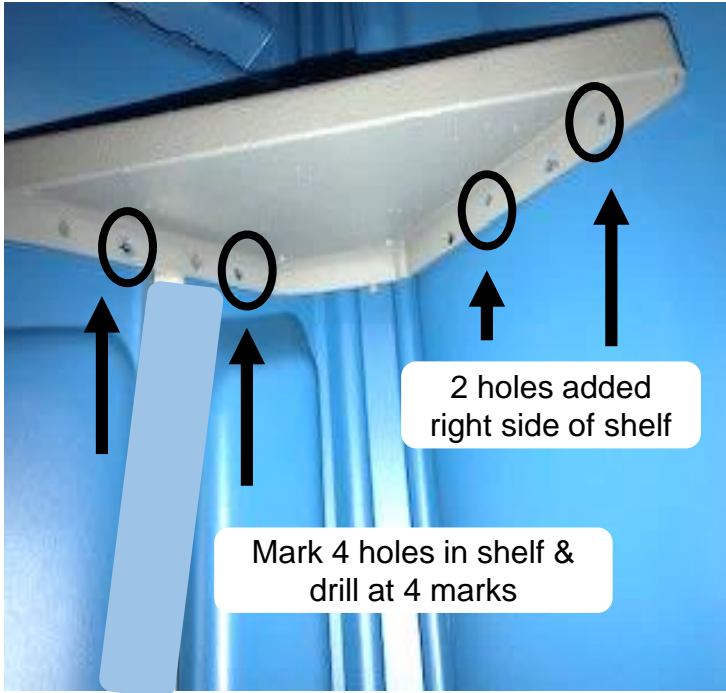


Solar light (PN 10019): Drill in center of roof (where strapping channels meet in middle of roof) using 1-1/2" hole saw. Remove clear cover at bottom of light, then remove plastic nut from threads on light. Insert light in top of roof with threaded end into hole drilled in roof. Rubber o-ring needs to be at the top of the threads of light (to create a seal on outside of roof when light is installed). **Make sure white button is depressed on inside of top housing to activate light in dark condition.** **Tip: before installing light in roof, charge light in sunlight for at least 15 minutes & cover top of housing, light should activate** . Turn plastic nut on light inside unit flat side up & hand tighten until snug. Turn clear cover onto bottom of threads on light. **TOOLS:** •Drill •1-1/2" Hole saw

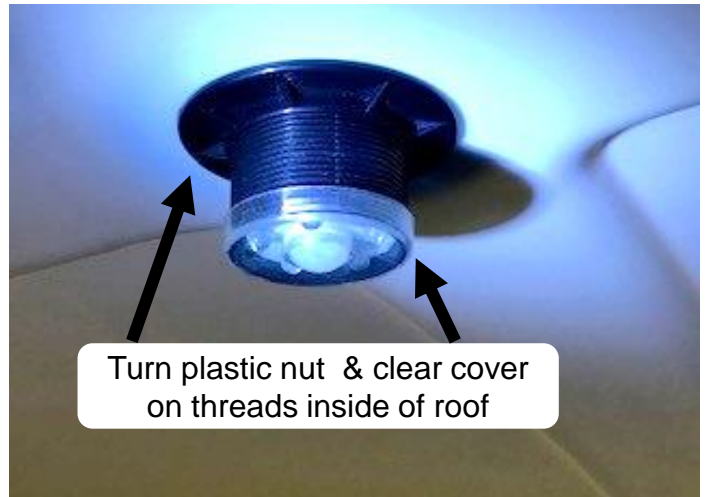

Coat hooks kit (PN 23140): COAT HOOK ON INSIDE OF SIDE PANELS: Position coat hook on inside of right side panel. Centered in square area between vent screens. Down 1.00" from top of square area on panel. Mark through hole in coat hook. Drill at mark on panel using #10 Drill bit. Fasten coat hook to panel using rivet #11030 outside on panel & washer #11315 inside unit. Repeat for installing coat hook in left side panel. TOOLS: ●Drill ●#10 Drill bit ●Rivet gun ●Tape measure ●Marker

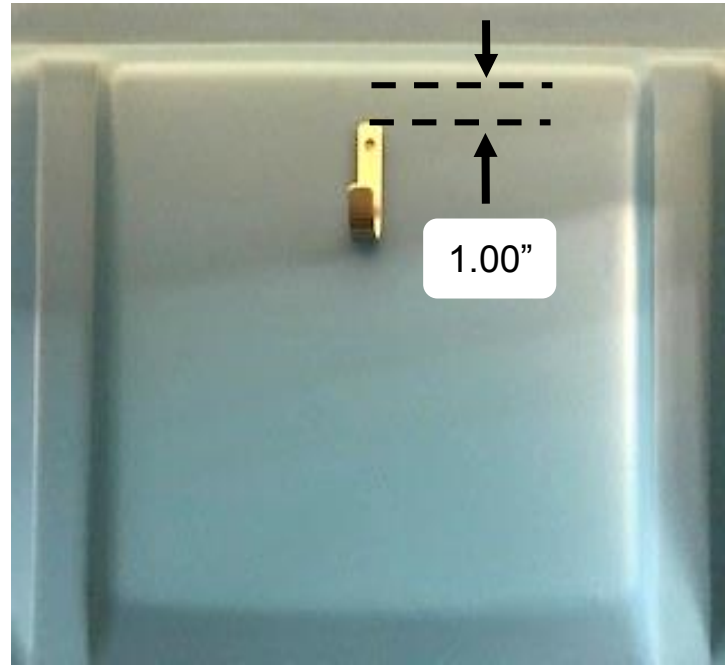

Coat hooks kit (PN 23140) (continued): COAT HOOK ON INSIDE OF DOOR: Position coat hook on inside of door in recess, centered at top of the door, down 1/2" from inside of rib. Mark through hole in coat hook. Drill at mark on door using #10 Drill bit (**through inside wall only on door**). Fasten coat hook to front facing using rivet #17436. TOOLS: ●Drill ●#10 Drill bit ●Rivet gun ●Tape measure ●Marker

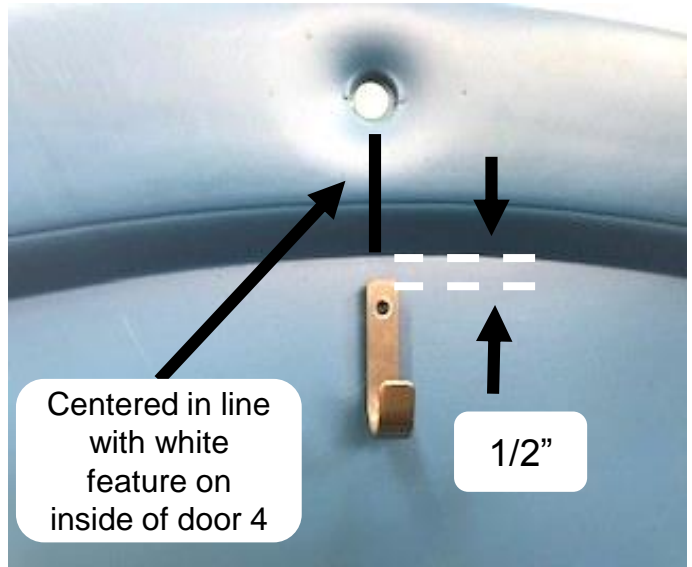

2530 Xenium Lane North, Minneapolis, MN 55441
Telephone: 763-553-1900 Fax: 763-553-1905
800-328-3332 / www.satelliteindustries.com